



## Torque Steer

By James Lee, Service Engineer

Ever wonder why your car seems to want to move to the right when you apply the throttle heavily? It is called torque steer.



Put a tape on top centre of steering wheel

Torque steer is due to the right drive axles and the associated difference in axle angle. Because of this, the torque is greater on one side than the other.

This condition can best be noticed when accelerating from a standing start or when accelerating hard at lower speeds.

A simple measurement to determine the degree of torque steer is to place a small piece of tape at the top centre of the steering wheel.

A simple measurement to determine the degree of torque steer is to place a small piece of tape at the top centre of the steering wheel. Drive the car and note the inches of steering wheel deflection required to steer the car straight under heavy acceleration.

### Auto Eurokars Pte Ltd

Ubi Showroom: Ubi Close, Singapore 408605. Tel : (65) 6749 4333.

City Showroom: 27 Leng Kee Road, Singapore 159098. Tel : (65) 6473 3777